


# SP-3100-30 INDOOR ALARM

The BBLA alarm system is designed to monitor liquid levels in sump basins, holding tanks, lift stations tanks and many other non-potable water and wastewater applications.

Auxiliary contacts with common, normally open and normally closed terminals are available behind a panel, on the lower right side, held in place by two #1 Phillips head screws. The barrier terminal screws are Phillips/Standard slot combo head type.

The BBLA is design to sound an audible horn and illuminate a red light to notify of an alarm situation. There is a green line voltage power indicator light to show that the unit is functioning, as well as a silence switch to turn horn off while fixing the alarm (the red alarm light will remain on until the alarm conditions are remedied).

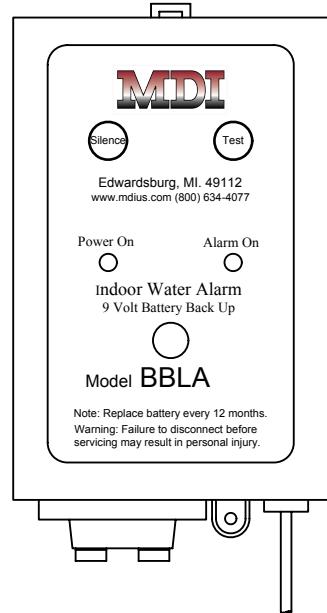

## Indoor Water Alarm with Battery Back-Up

### Benefits / Features

- \* Durable NEMA 1 thermoplastic enclosure rated for indoor use
- \* Red "Alarm On" light, green "Power On" light and 85 decibels horn at 10 feet
- \* Alarm test and horn silence button with auto reset
- \* Battery back-up
- \* Auxiliary contacts
- \* External terminal block for easy float installation
- \* Two-Year limited warranty

### Specifications

- Dimensions	6" X 3 3/4" X 2 1/2"
- Enclosure	NEMA 1 thermoplastic (external mounting feet)
- Horn	85db at 10'
- Weight	1 1/2 pounds
- Voltage	Primary: 120 VAC, Secondary 12 VAC, 60 Hz (Alarm condition 2.5 Watts max)
- Power cord	6 feet 120 VAC (NEMA 5-15P)
- External block connection	Float connection. <b>DO NOT APPLY POWER!</b> Class Two Output, 12 VAC
- Auxiliary contacts	120 VAC, 5 AMP max 60 Hz



MDI Inc.  
P.O. Box 710  
25028 US Highway 12 East  
Edwardsburg, MI 49112


Toll Free: (800) 634-4077  
PH: (269) 663-8574  
FAX: (269) 663-2924  
[www.mdius.com](http://www.mdius.com)

# INDOOR ALARM SYSTEM INSTALLATION INSTRUCTIONS

Be sure to follow National Electric Code, ANSI/NFPA 70, when installing this unit to prevent moisture from entering or building up inside equipment.

## ALARM & FLOAT INSTALLATION

1. Install 9V battery (not included). Replace battery once a year.
2. Select an indoor mounting location.
3. Install a mounting screw in the wall at the desired height and slip keyhole on the back of the box onto the screw and pull down.
4. Use another screw to fasten bottom mounting cleat to the wall.
5. Use cable tie supplied in the box to secure the float switch at the desired warning level in the tank (see diagram). Cut off excess material left from cable tie and discard.
6. Now manually test the alarm by tilting the float switch up until you hear the alarm notification and you see the alarm light turn on.
7. Periodically test unit by pushing the test button on the cover to make sure the unit is working properly.

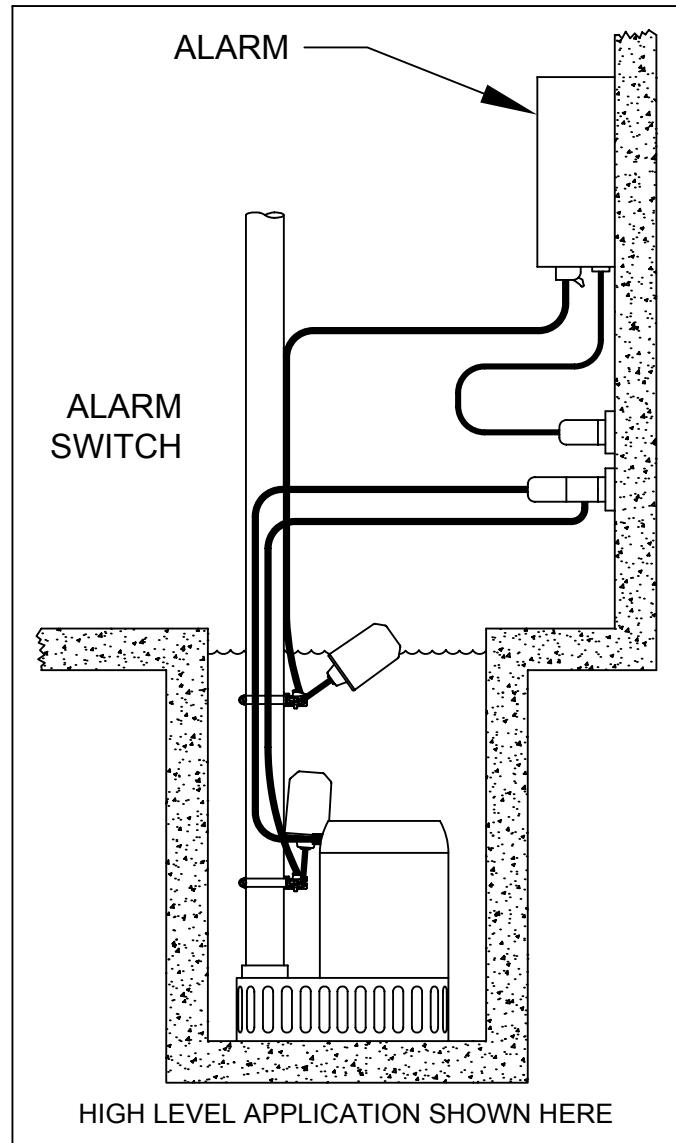

**WARNING: FAILURE TO FOLLOW INSTRUCTIONS MAY RESULT IN SERIOUS PERSONAL INJURY OR DEATH. REFER TO THESE INSTRUCTIONS ANY TIME THE UNIT IS DISCONNECTED FOR ANY REASON**



### ELECTRICAL SHOCK HAZARD

DISCONNECT POWER BEFORE INSTALLING OR SERVICING THIS PRODUCT. A QUALIFIED SERVICE PERSON MUST INSTALL AND SERVICE THIS PRODUCT ACCORDING TO APPLICABLE ELECTRICAL & PLUMBING CODES.



### EXPLOSION OR FIRE HAZARD

DO NOT USE THIS PRODUCT WITH FLAMMABLE LIQUIDS. DO NOT INSTALL IN HAZARDOUS LOCATIONS AS DEFINED BY NATIONAL ELECTRIC CODE, ANSI/NFPA 70.